


DropTop™ Single 32 Classic

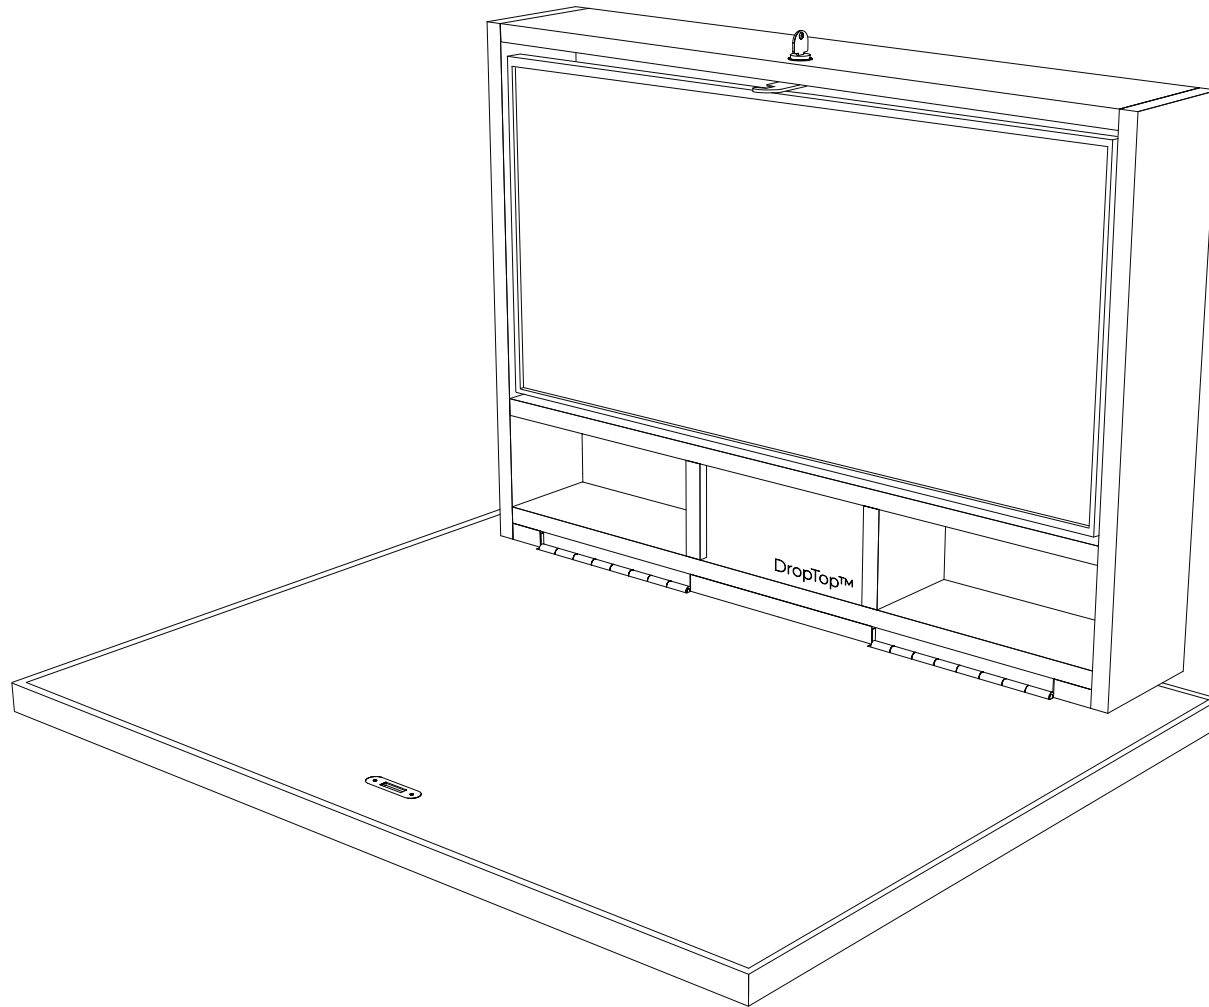

Installation Instructions.

DropTop™ Single 32 Classic


Installation Guidelines

Please read and follow these instructions carefully to ensure the correct installation of your DropTop™ wall-mounted desk. Failure to adhere to the instructions may result in product damage, personal injury, or voiding of the product warranty.

Before You Begin:

- Remove the contents from the package and place them on a protective surface to prevent damage.
- Compare the package contents with the Supplied Parts List to ensure all components are intact and undamaged.
- Thoroughly read and review all instructions provided in your DropTop™ Installation guide before beginning assembly.

If you encounter any issues or have questions during the assembly process, please contact our customer support team for assistance.

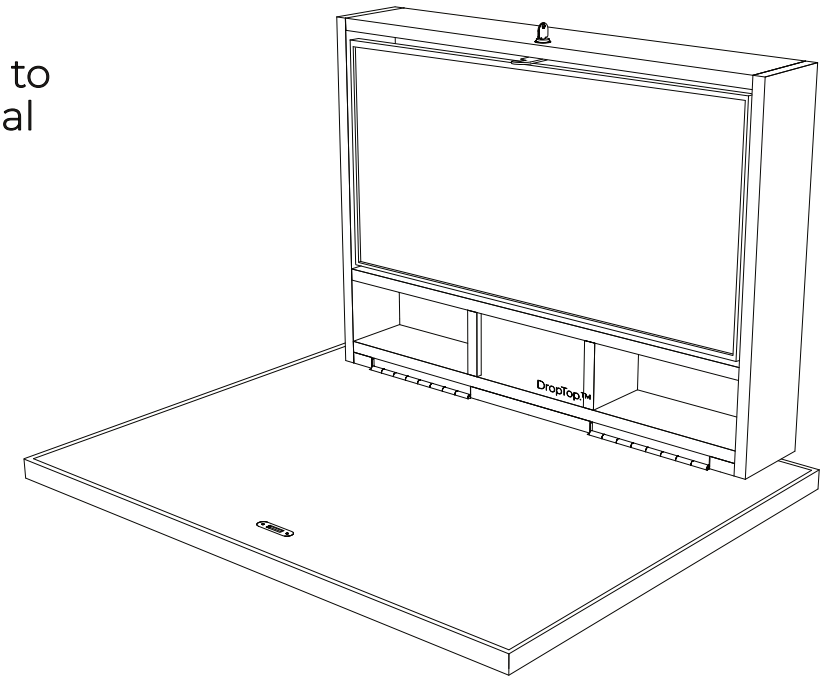


DropTop™ Single 32 Classic Instructions

Fixings Packs


A Plasterboard Wall Fixings	B Brick/Concrete Wall Fixings	Cable Management Grommet	
x3 x3	x6 x6	1 x VESA Plate-b 1 x Wall Plate & Articulating Arms-A 2 x M4 Bolt - d 2 x M6 Bolt 4 M4 Bolt - f	
Power cable supplied with your DropTop will vary based on your order. UK PLUG EU PLUG USA PLUG AU / NZ PLUG			

Tools

*included







1 x 4mm Allen Key




1 x 25mm Spade bit.
For a Plasterboard Wall


*Not included

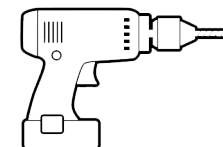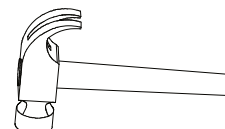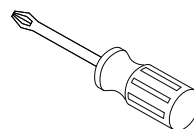

DropTop™ Single 32 Classic parts.

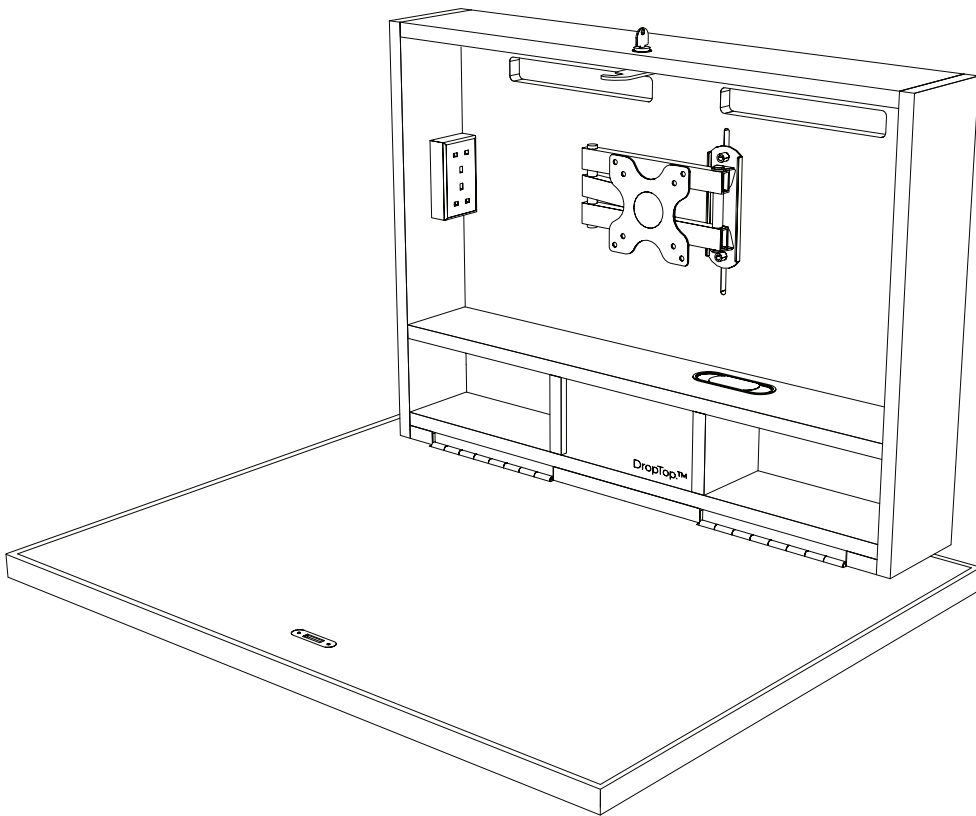

No Monitor

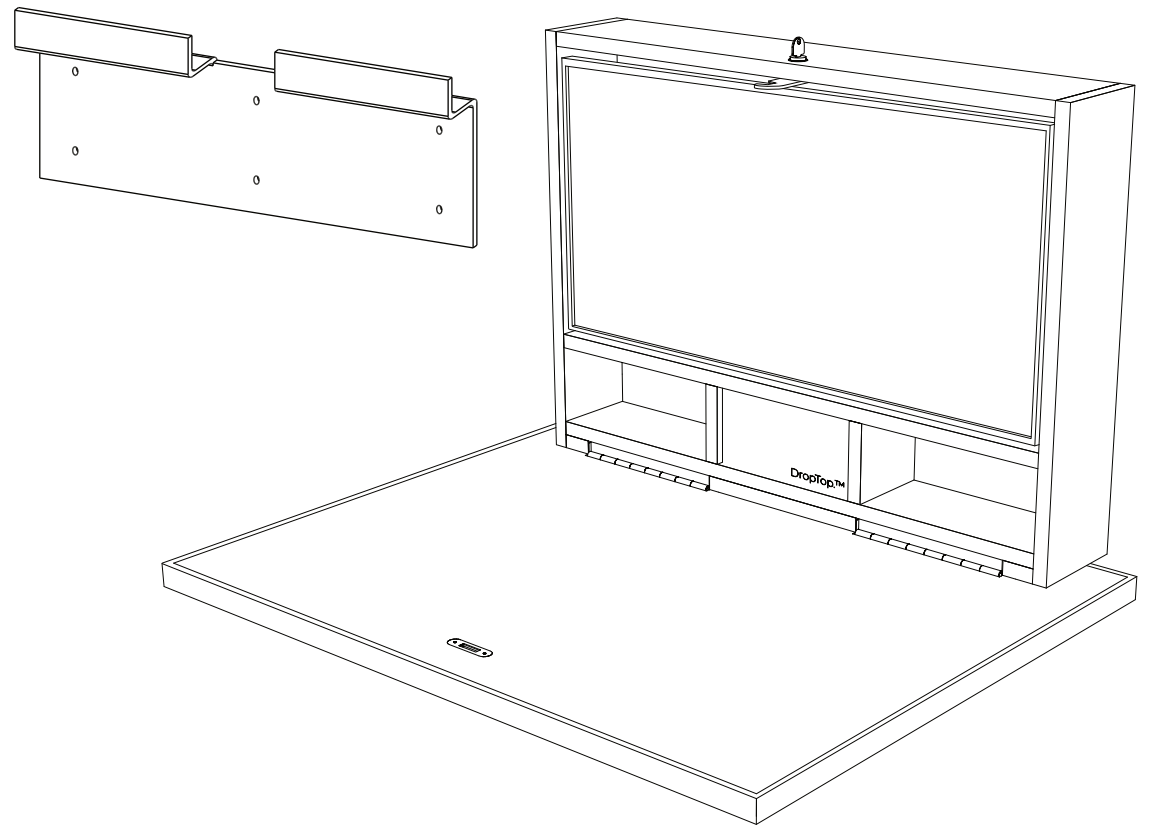

**Optional Integrated Monitor
32-inch Monitor**

DropTop™ Single 32 Classic dimensions.

Exterior dimensions when Closed:

Height: 82.3 cm

Width: 96 cm


Depth: 16.5cm

Worktop Dimensions:

Width: 71 cm

Depth: 81 cm

**The Single 32 Classic supports
up to 75kg in weight**

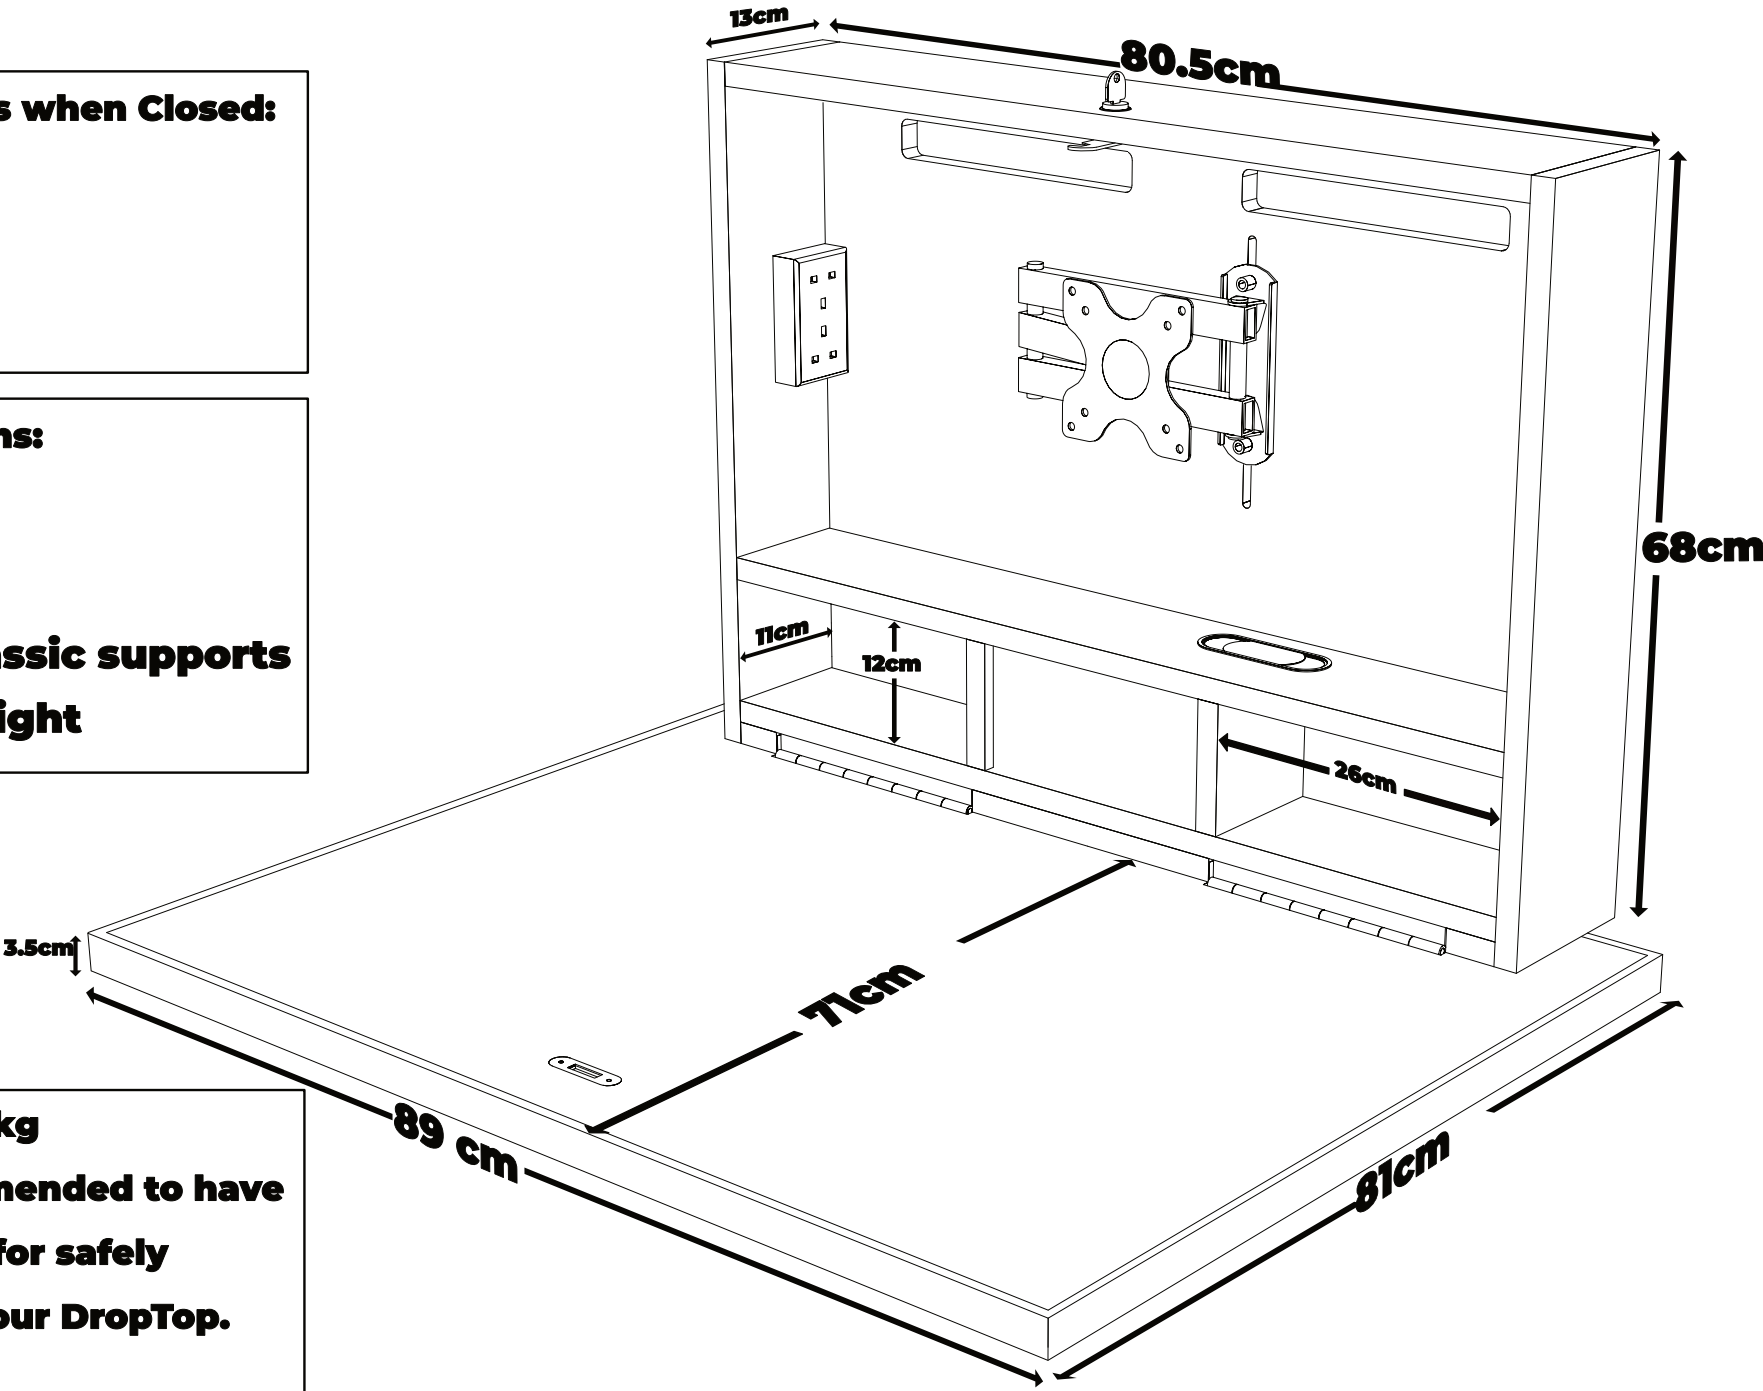


Weight - 40kg



**It is recommended to have
two people for safely
mounting your DropTop.**

DropTop™ Single 32 Classic **Monitor Space Dimensions.**

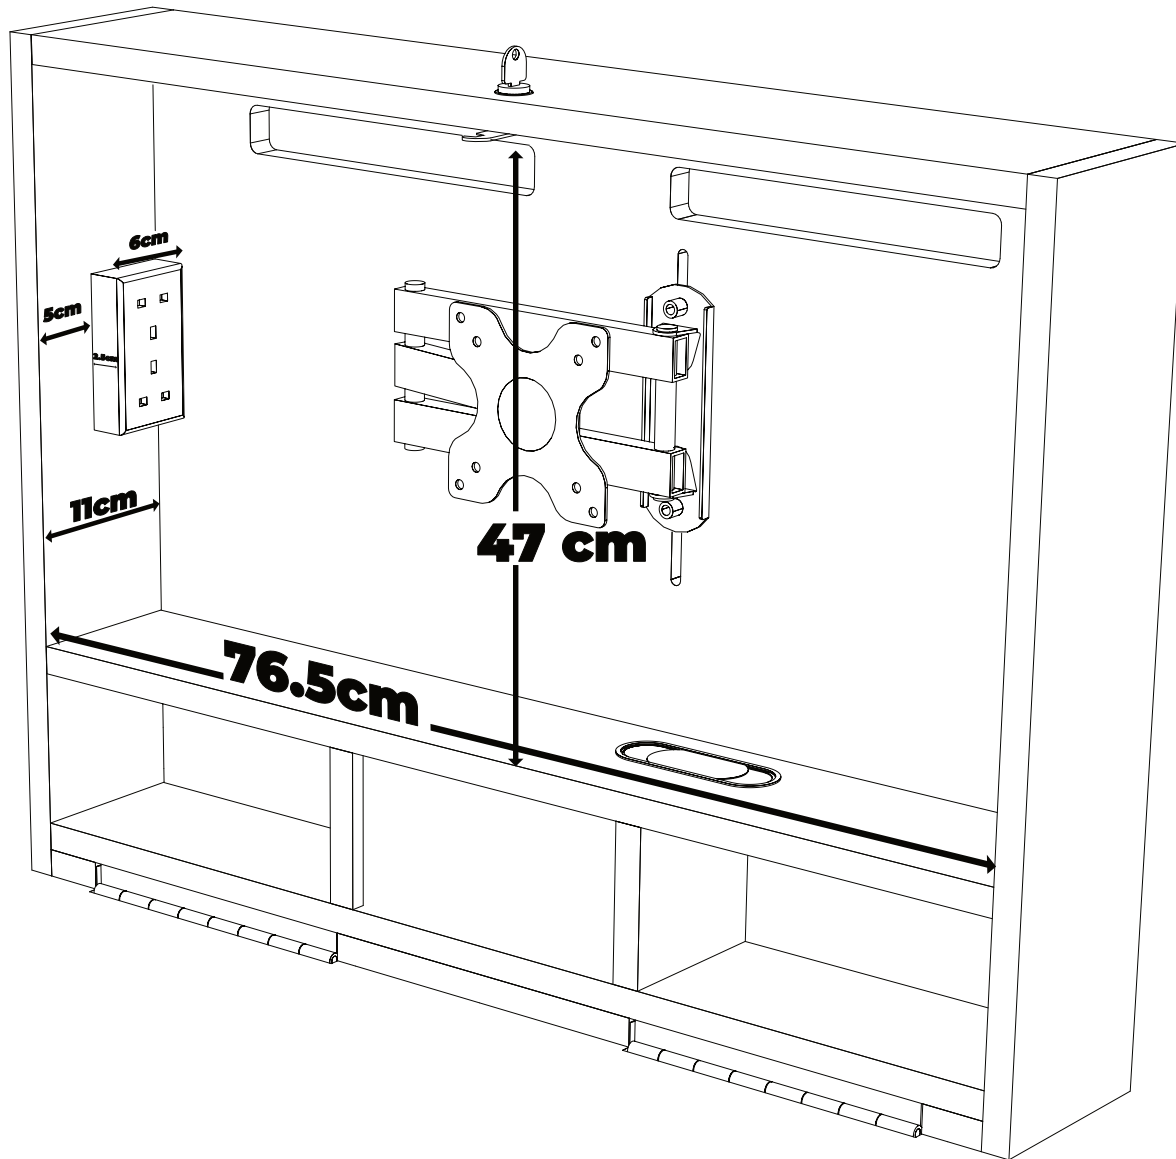

The Single 32 Classic is designed to house a 32-inch monitor.

Available Monitor Space dimensions:

Height: 47cm


Width: 76.5cm

Depth: 6 cm



Recommended maximum depth for your monitor is 6 cm.



In choosing a monitor for your DropTop Single 32 Classic, it is important to consider both the depth of your monitor and the depth of the mount bracket to ensure that they do not exceed 11cm in total depth.

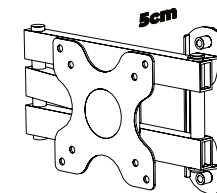

Mount Bracket Depth
Depth: 5cm



Extendable Arm Monitor Mount

One extendable monitor mounts is included with your DropTop Single 32 Classic, providing tilt, swivel, and rotation functionality.

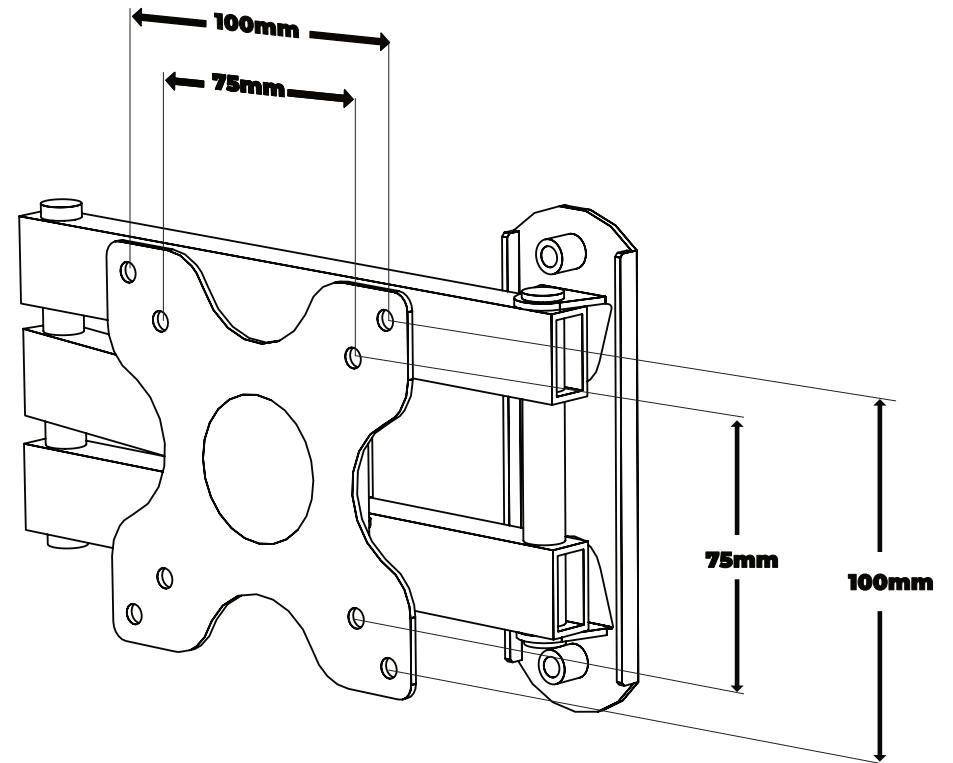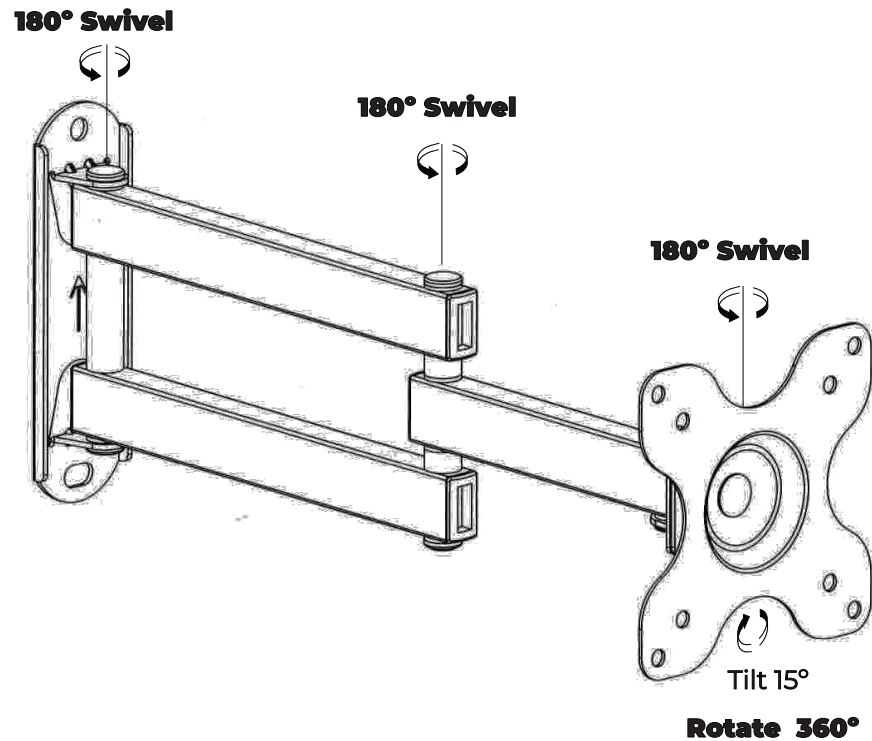


Ensure your monitor is VESA compatible with 75x75mm or 100x100mm.

DropTop.™ Single 32 Classic Wall Plate.

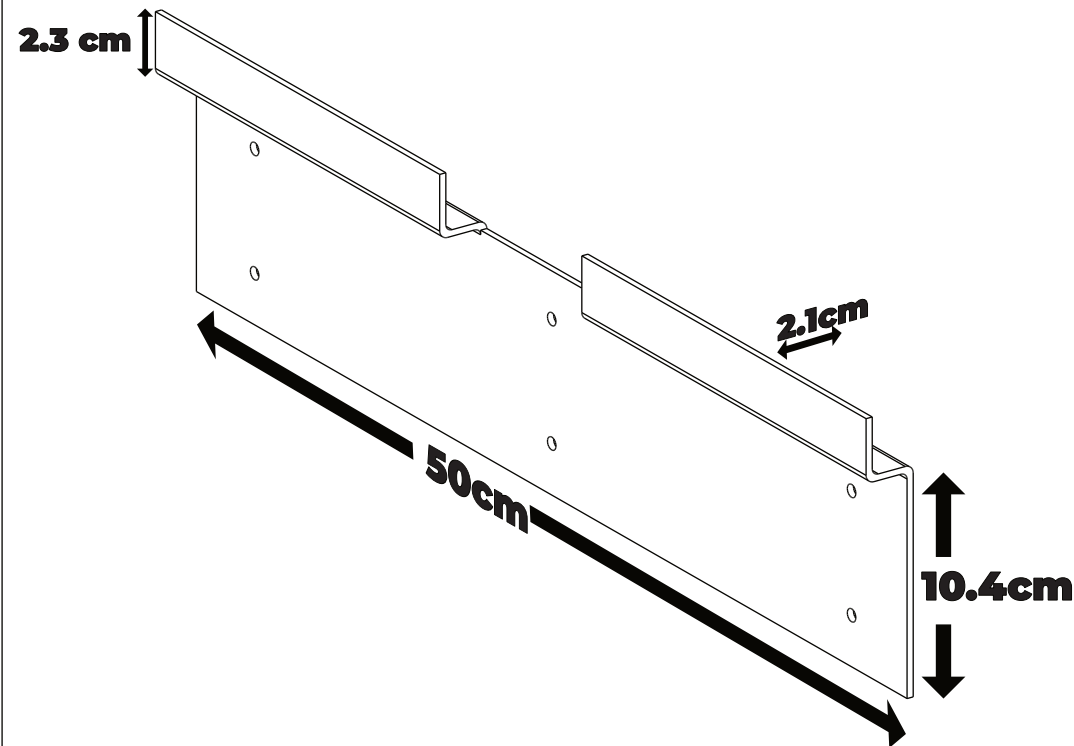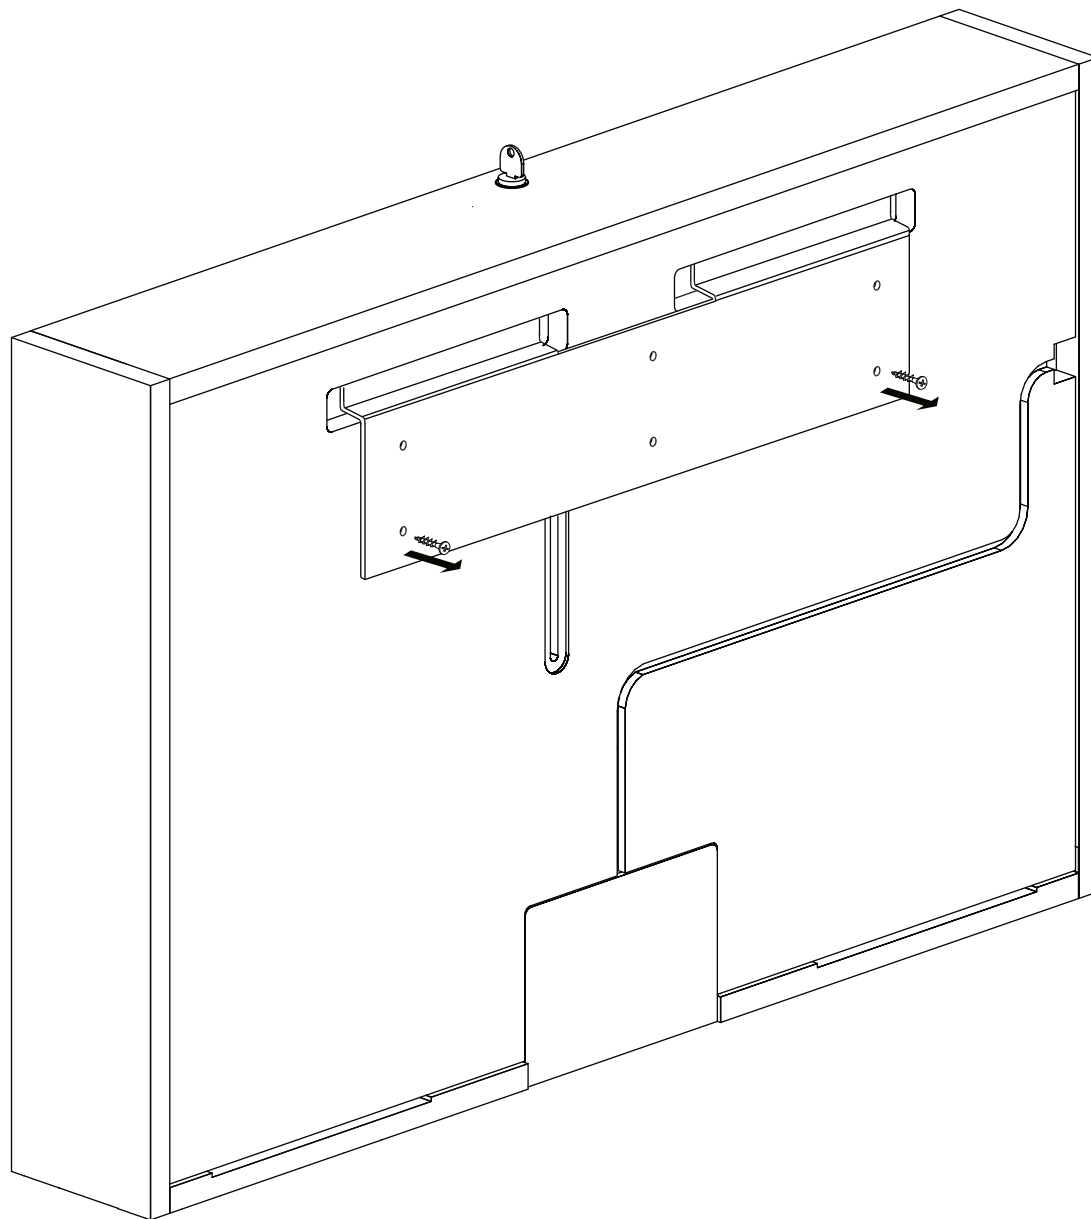

The Wall Plate is temporarily secured to the back of the DropTop for secure transit. Remove the two securing screws to detach it from the DropTop.


DropTop™ Electrical Wiring

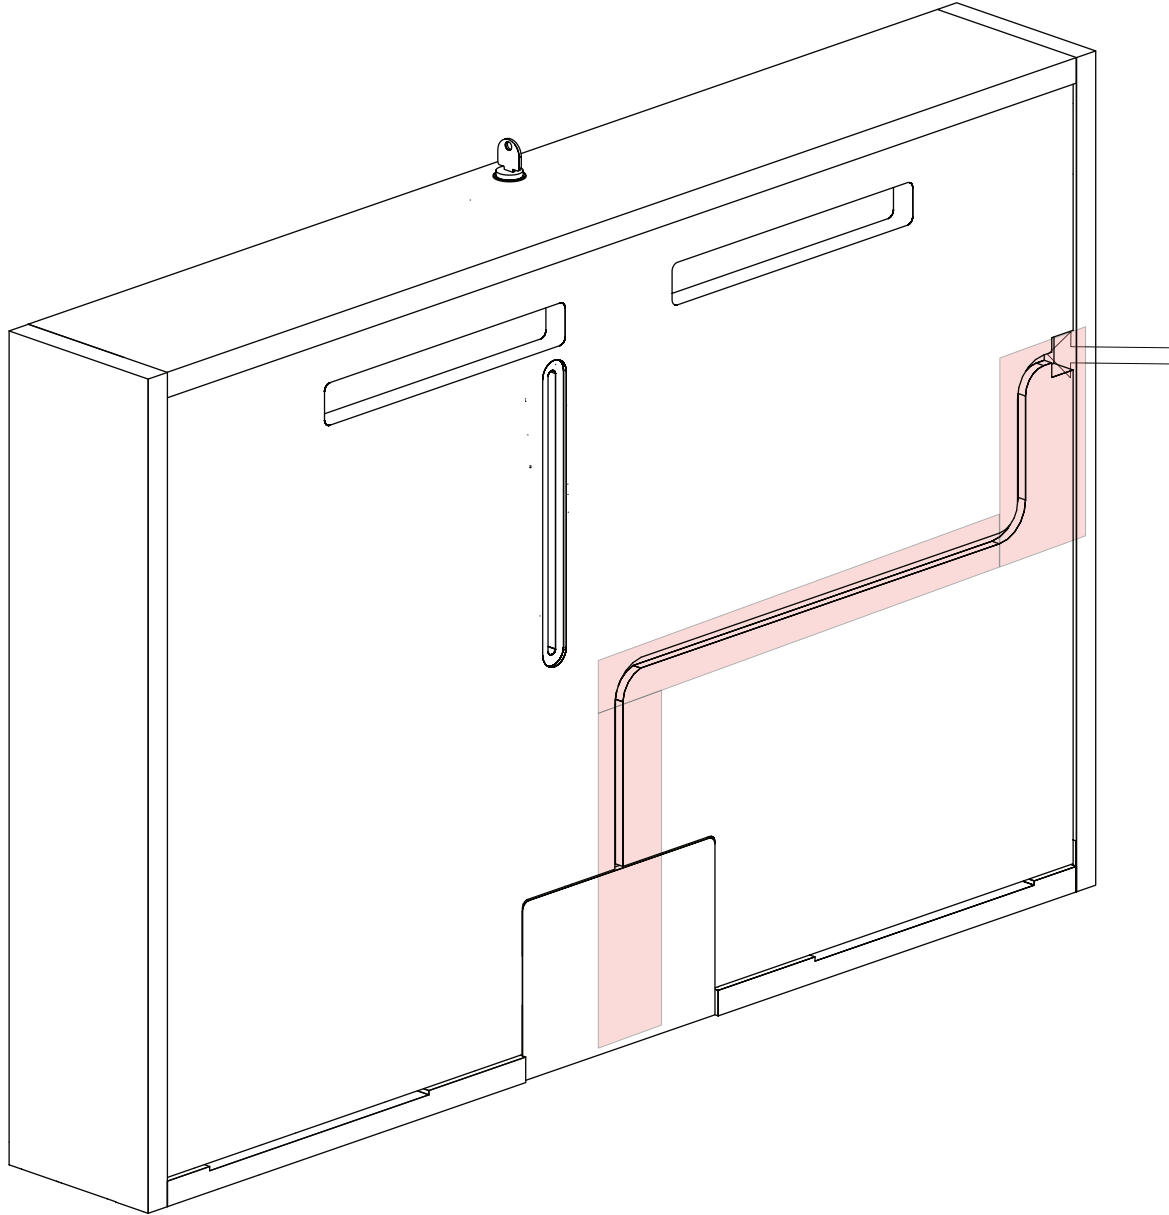


Electrical wiring is embedded into the back of your desk. Take care not to drill or damage any embedded wires while installing your desk.

Installing your own monitor.


1

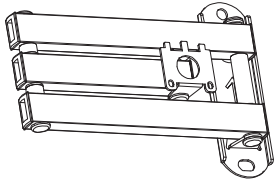


a -Wall Plate & Articulating Arms(1)

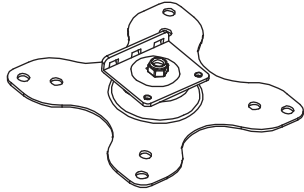


b-VESA Plate(1)



c-Wrench(1)



d-Bolt(2)




f- M4 x12Bolt



l-Cable Tie(3)




m-Allen Key(1)



2 x M6 Bolt


2

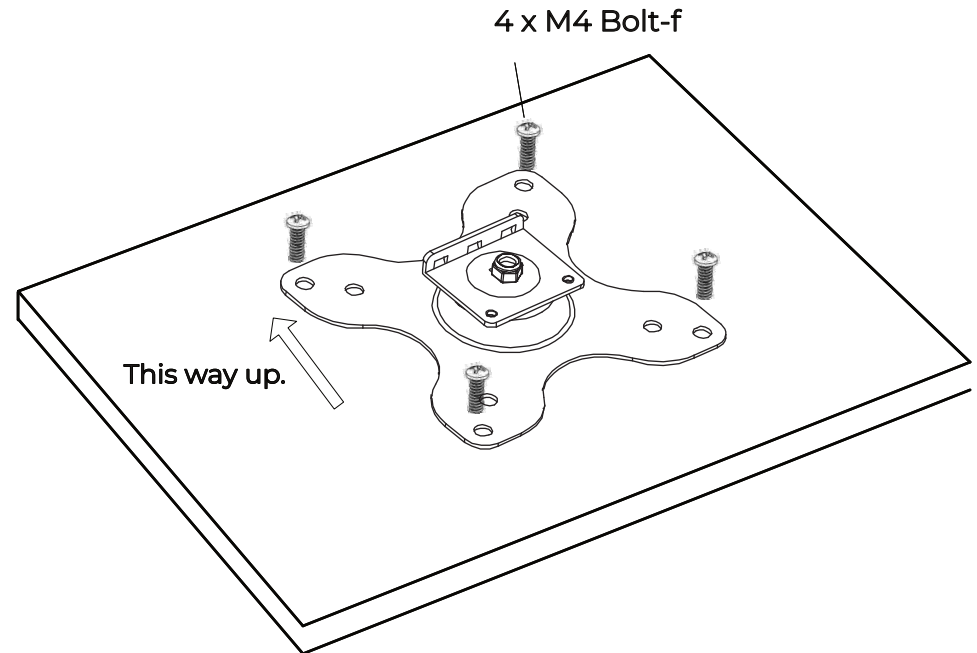



Carefully place your monitors face down on a clean, flat surface. Attach the VESA Plate-b to the back of your monitor using the M4 Bolts-f provided.

3**Front View**

Wall Plate &
Articulating Arms-A



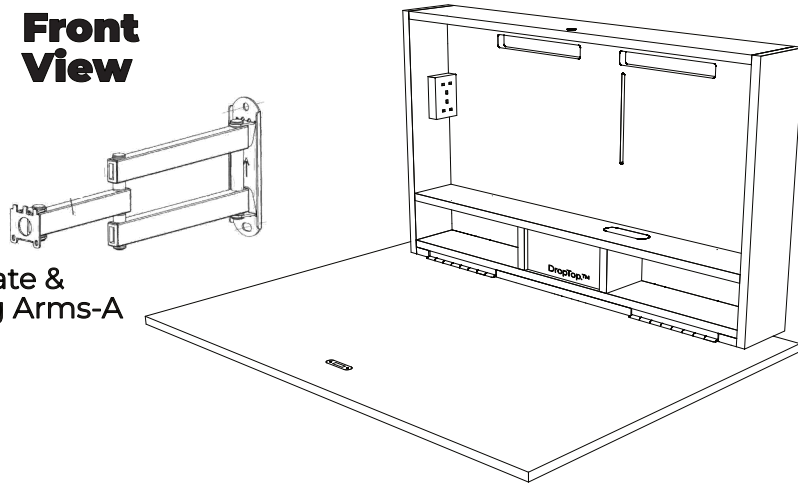
**4**

Fully extend the articulating arms out.

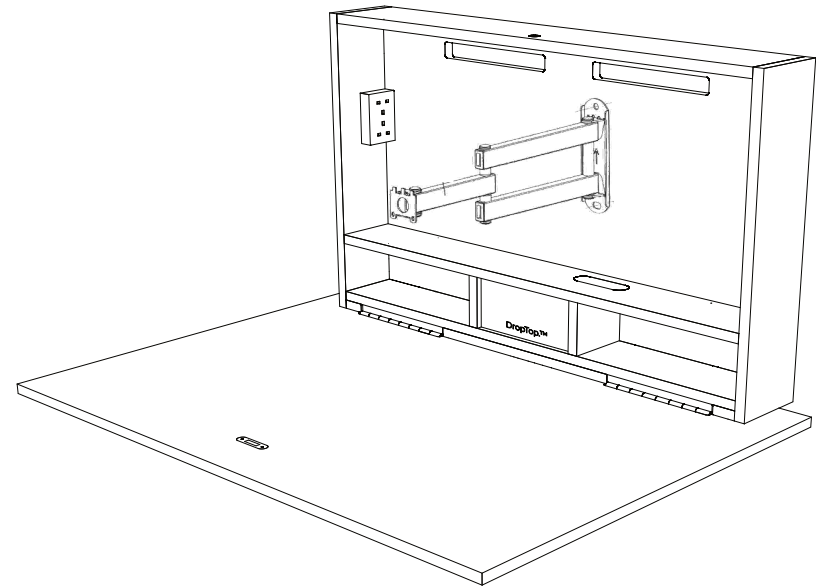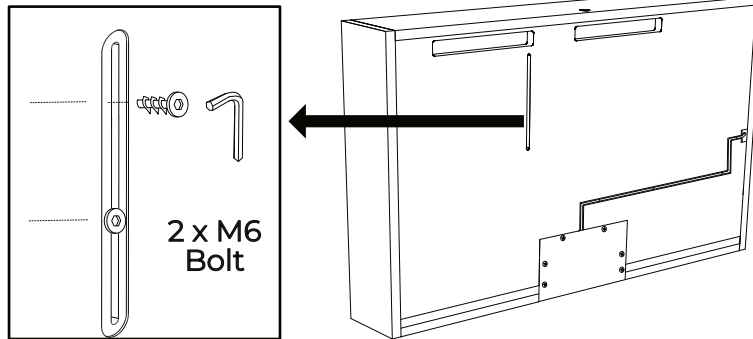**Back View**

Attach the Wall Plate & Articulating Arms-A to the VESA slot on the back of the DropTop, using the 2 x M6 bolts provided.

5

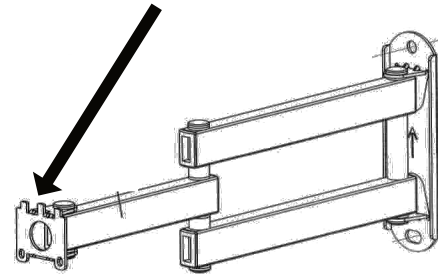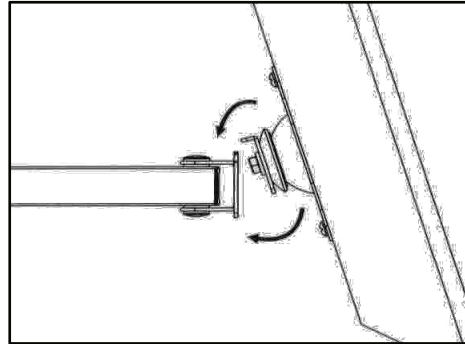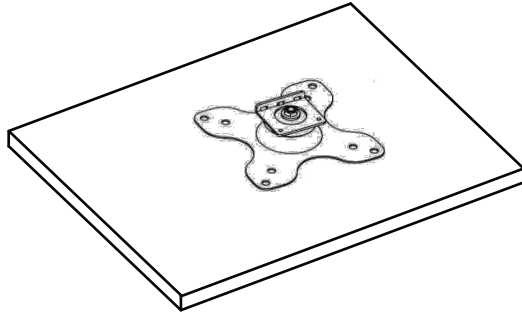


Hook the VESA Plate-b to the Socket on the fully extended arms.


6



2 x M4 Bolt - d

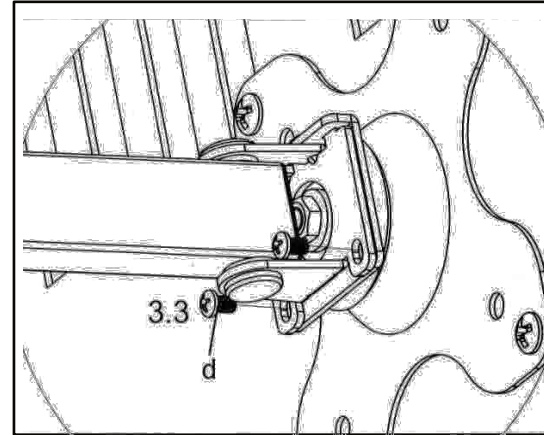


Secure the VESA Plate-b to the articulating arm using the 2x M4 Bolt-d provided.

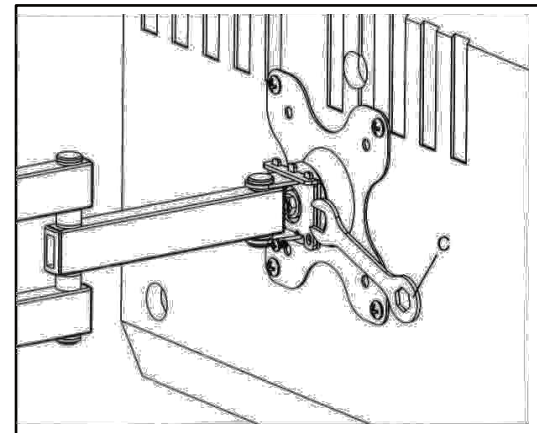

Use the wrench provided to adjust the tilting angle of the VESA Plate-b.


7

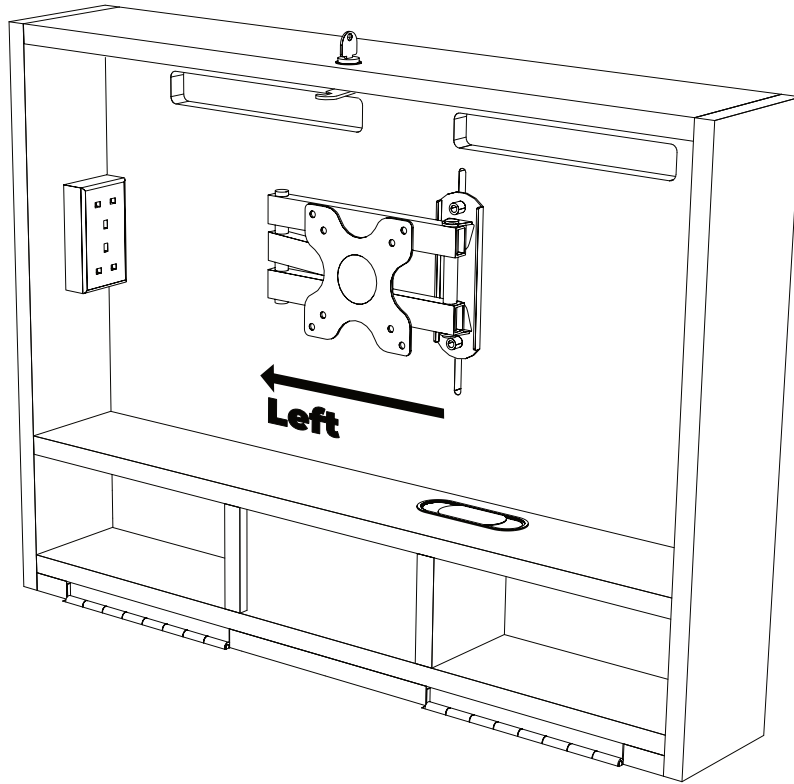

The mount bracket should be positioned as indicated in the diagram to ensure proper and mounting of the monitors.


8

Back View

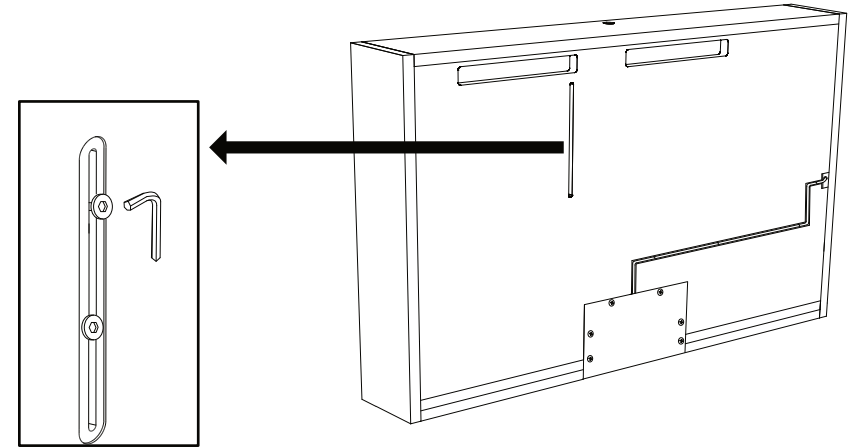


To adjust the height of the mount along the VESA slot, slightly loosen the M6 bolts on the back, then reposition the mount to the desired height and tighten the bolts again.


Cable Management

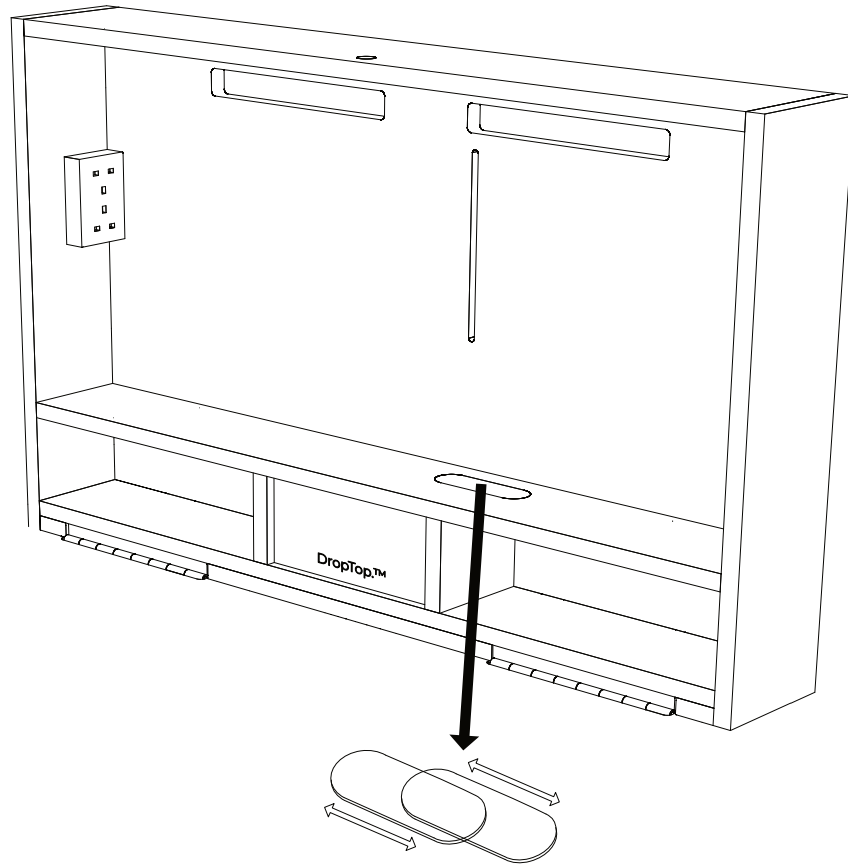


Before mounting your DropTop onto the wall, connect any cables to your monitor and feed them through the oval cable management grommet to keep them tidy.

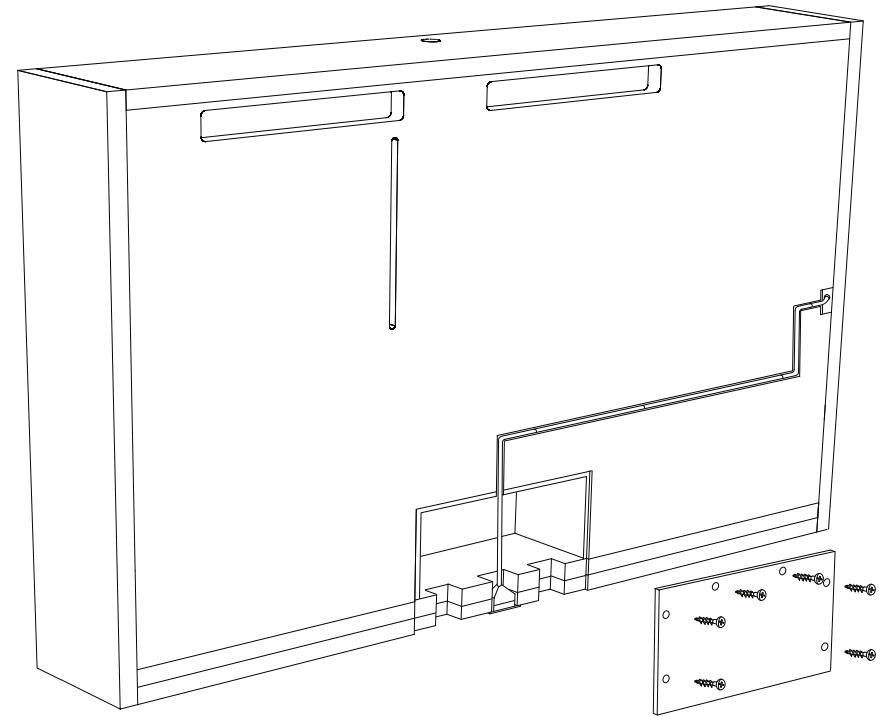

The central shelf housing contains the electrical cable that powers your DropTop.
To access it, remove the screws from the wood cover.

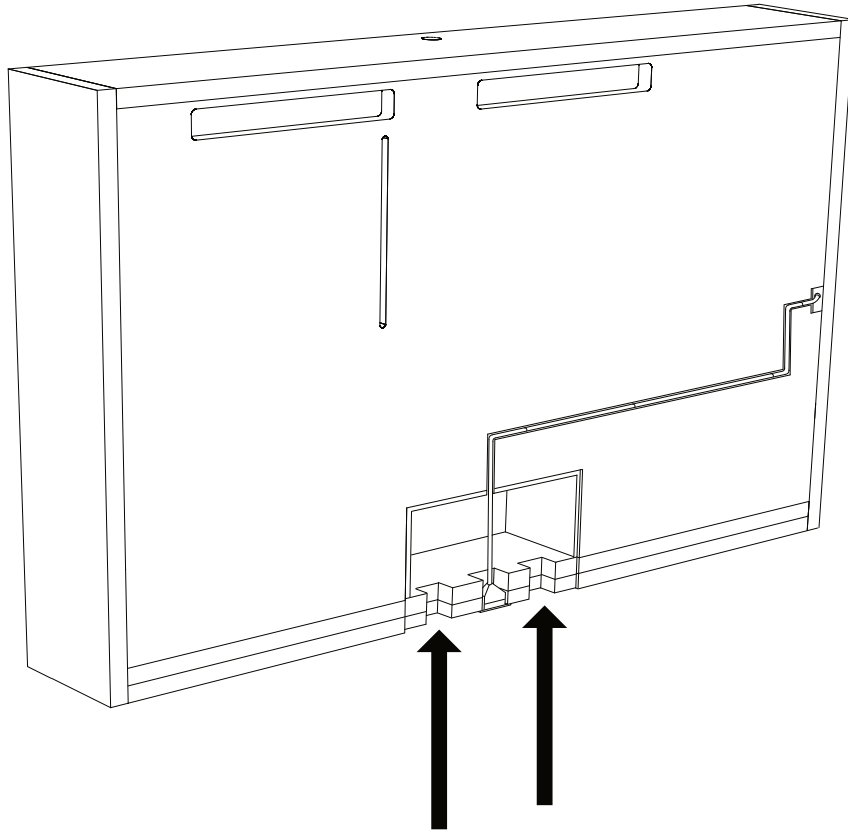


The central shelf housing can be used to hide extra cables or pass through a wired Ethernet cable, if needed.

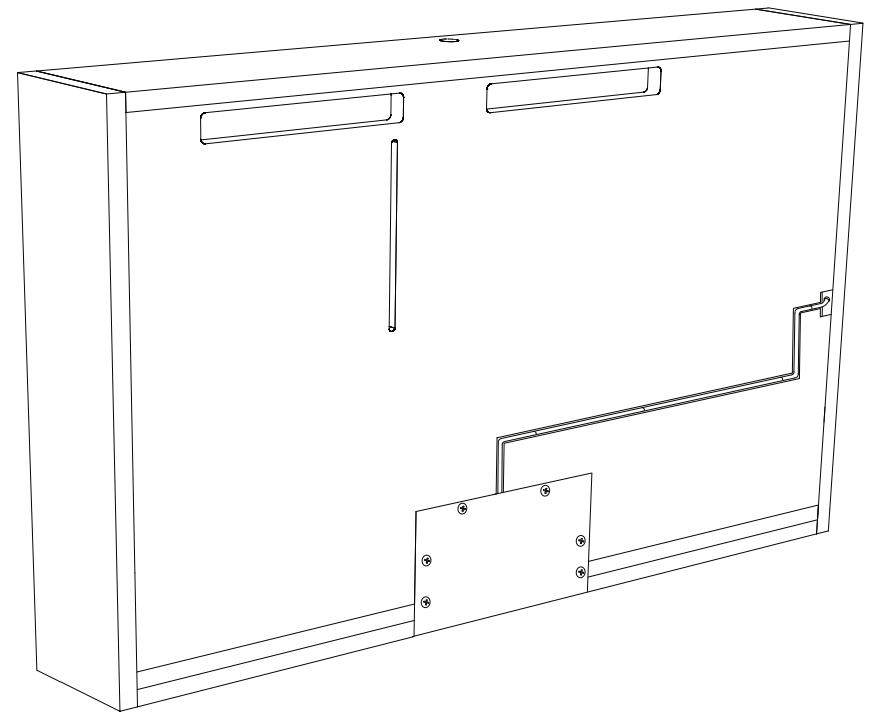

To re-attach the wood cover, screw in the screws.


Mounting the Wall plate.

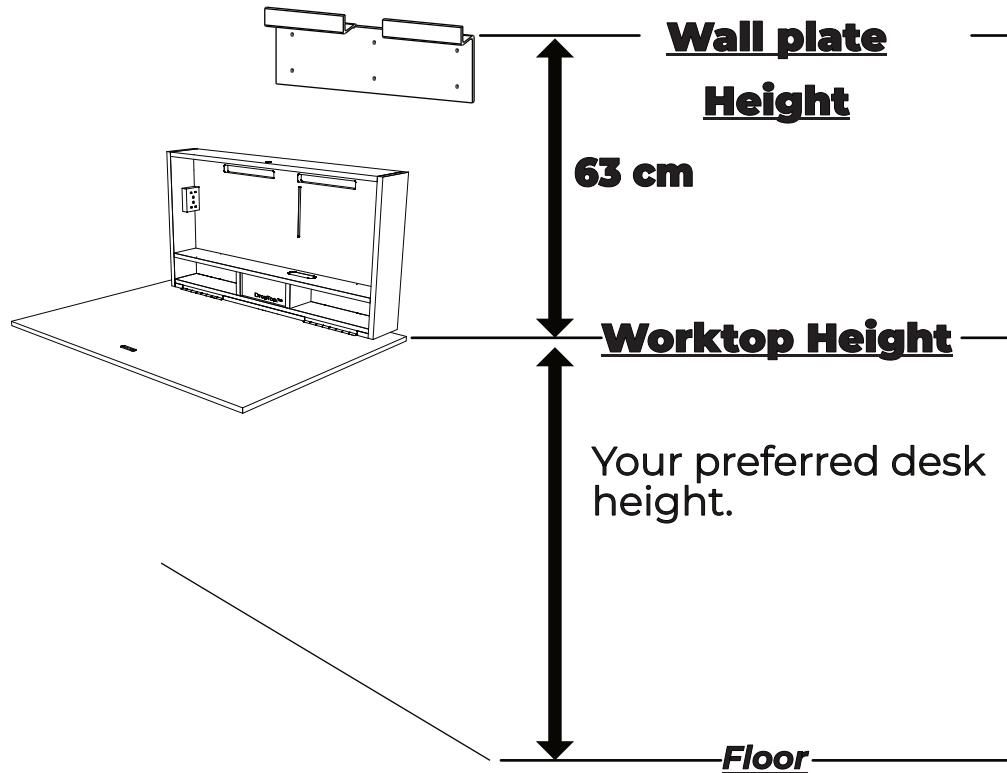

Your DropTop™ desk can be installed at any height that best suits your needs and preferences.

Depending on your preferred sitting position, you can install your DropTop™ on the wall between 65cm and 80cm.


DropTop™ Single 32 Classic
Wall plate height.

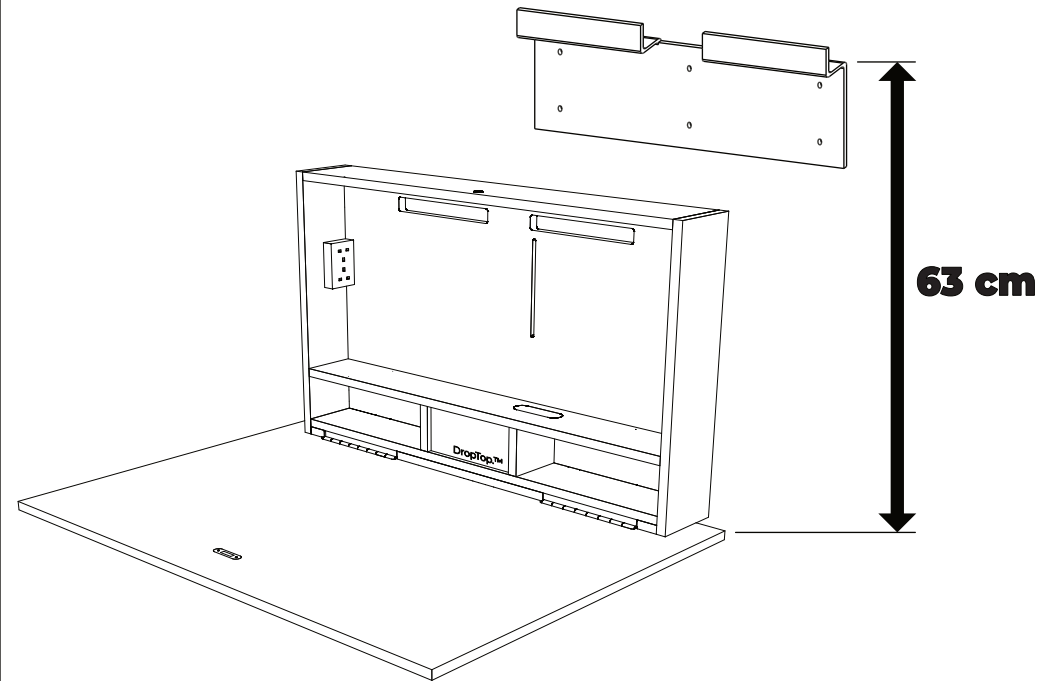

The height to install the wall plate should be measured from the top of the desired desk height to the top of the recessed area of the wall plate.

Installing on a brick and concrete wall.


1

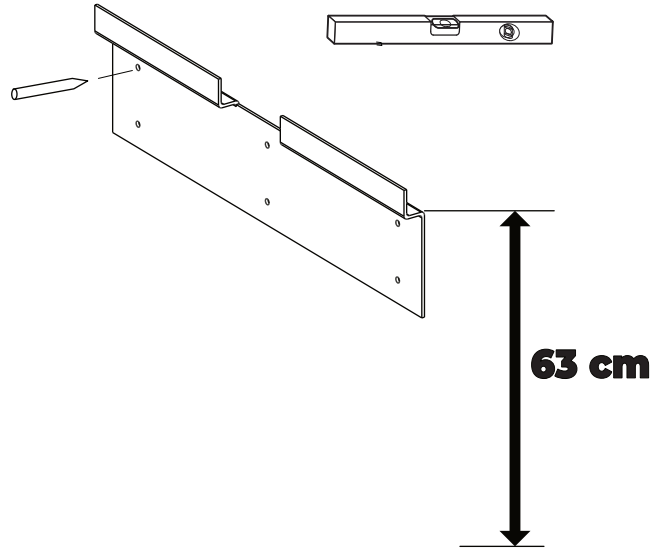

Use the wall plate as a guide and mark the position of the fixing holes with a pencil.

The height to install the wall plate should be measured from the top of the desired desk height to the top of the recessed area of the wall plate.as previously explained.

2

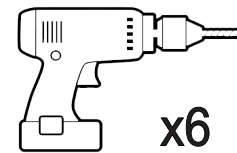


Drill 6 x 8mm sized holes.

3



Wall

Fixings Pack #9

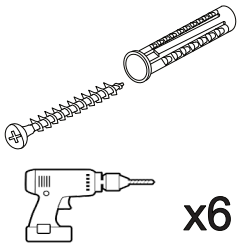


x6

4

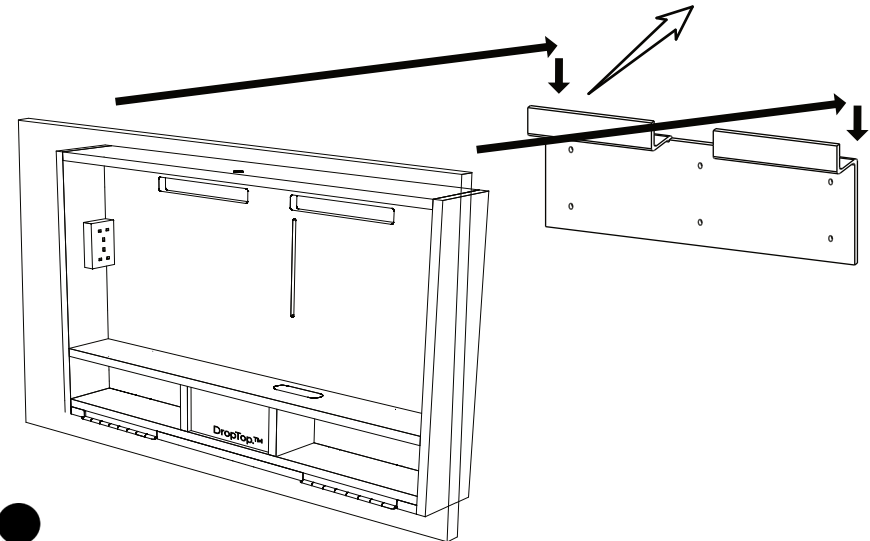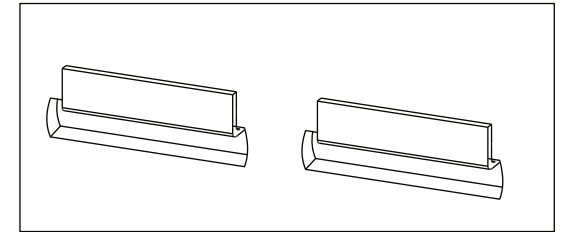


To safely mount the desk, ensure that the DropTop.™ is **locked** before lifting it onto the wall plate. The DropTop.™ should fit snugly in the recess of the wall plate.


10

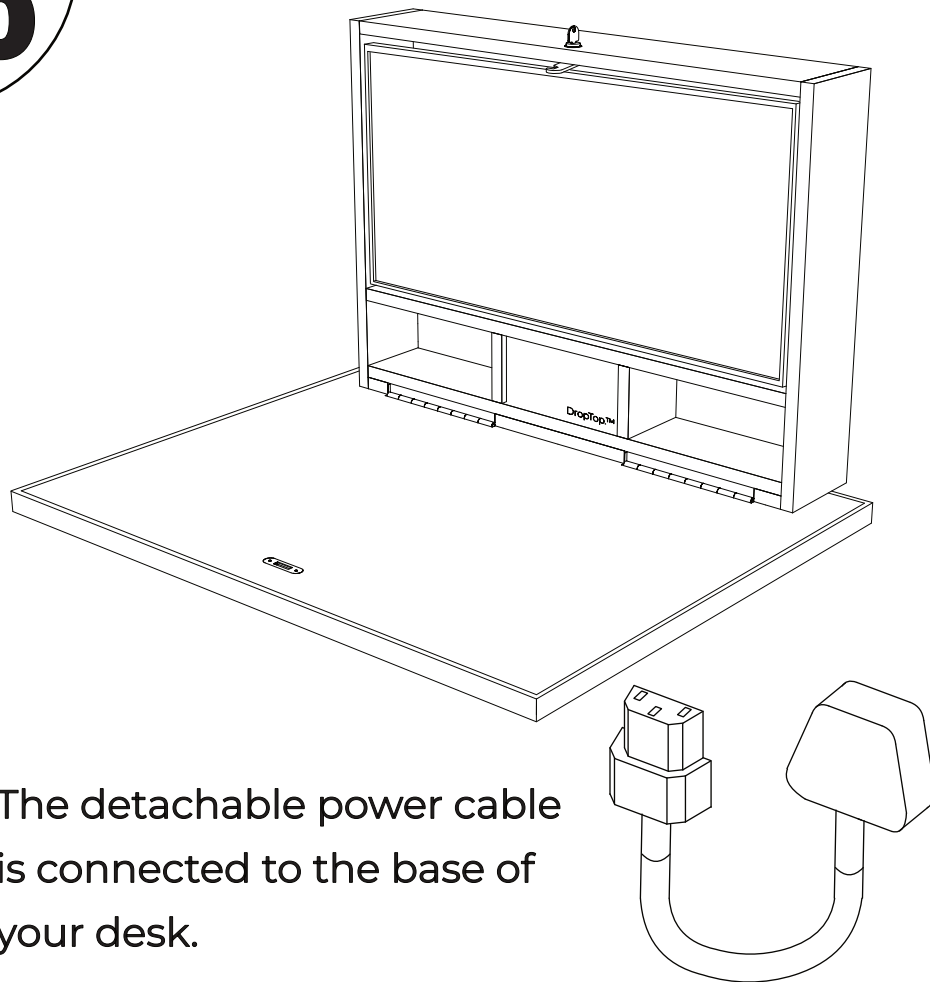


The detachable power cable is connected to the base of your desk.

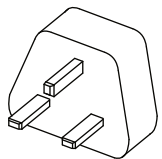


UK PLUG

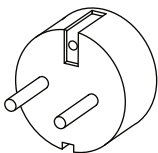

EU PLUG

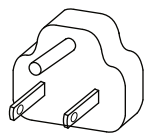


USA PLUG

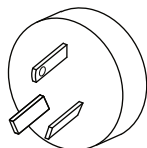

AU / NZ PLUG

Installing on Plasterboard/Drywall.


1

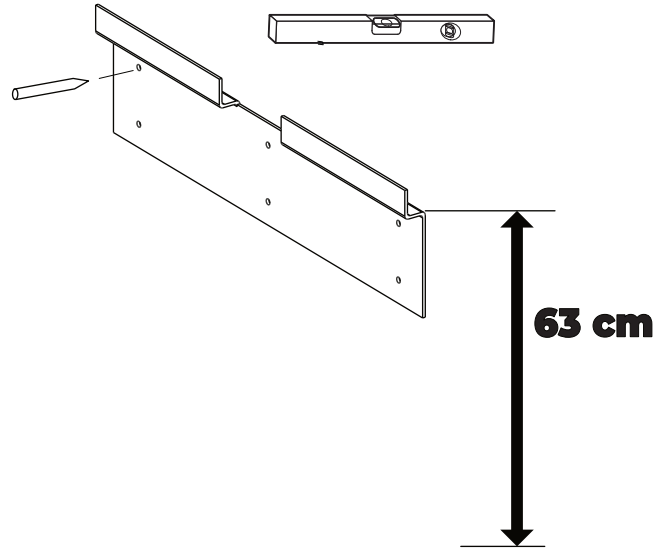


Use the wall plate as a guide and mark the position of the fixing holes with a pencil.

The height to install the wall plate should be measured from the top of the desired desk height to the top of the recessed area of the wall plate as previously explained.

2

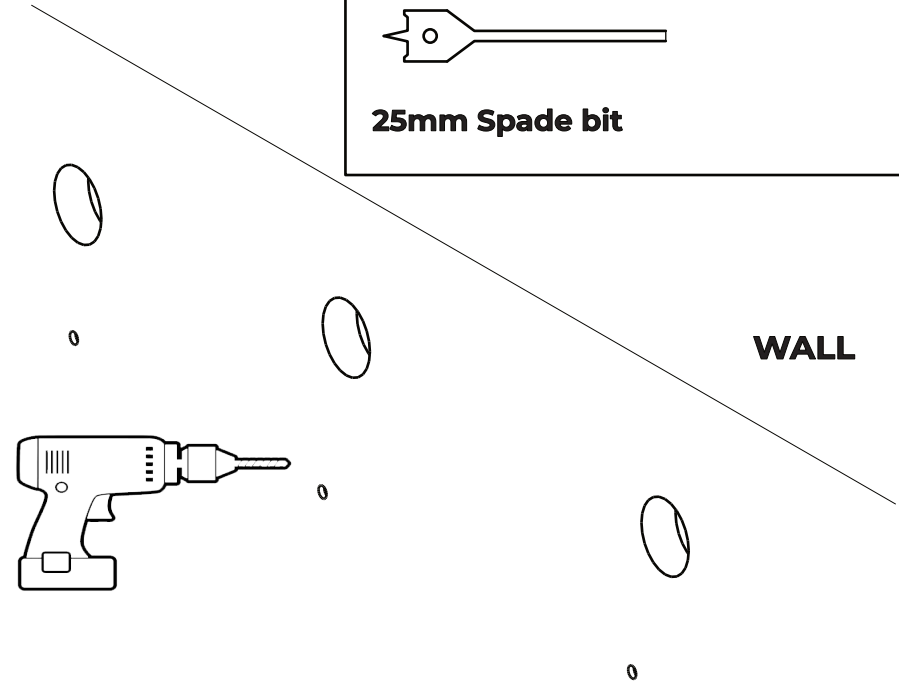

**Included
Recommended tools**




25mm Spade bit

Using the 25mm Spade Bit, cut 3 holes of 25mm diameter centred on the top row of your wall plate pencil markings for the Geefix.


Drill 3 holes of 8mm diameter for the wall plugs.

3

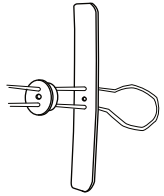


GeeFix Fixings


Assemble your GeeFix wall anchor system by threading the supplied pullcord through the round wall plug, the curved back plate, and back through the wall plug.

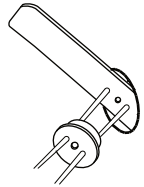


While holding onto the pullcord, feed the curved back plate into the hole and centre on the 1" hole.




While keeping light tension on the pullcord slide the wall plug into the 1" hole to align with the holes on the back plate.




While keeping firm tension on the pullcord, screw the large screw into the centre hole until the GeeFix becomes firm, but do not over tighten. Keeping tension on the pullcord will keep the back plate in place during installation.



Pull out the pullcord but do not discard. You can use the same pullcord on additional GeeFix.




Screw in the 2 smaller screws on either side of the large screw and tighten until the GeeFix is firmly secured but do not over tighten.




Remove the centre screw

4

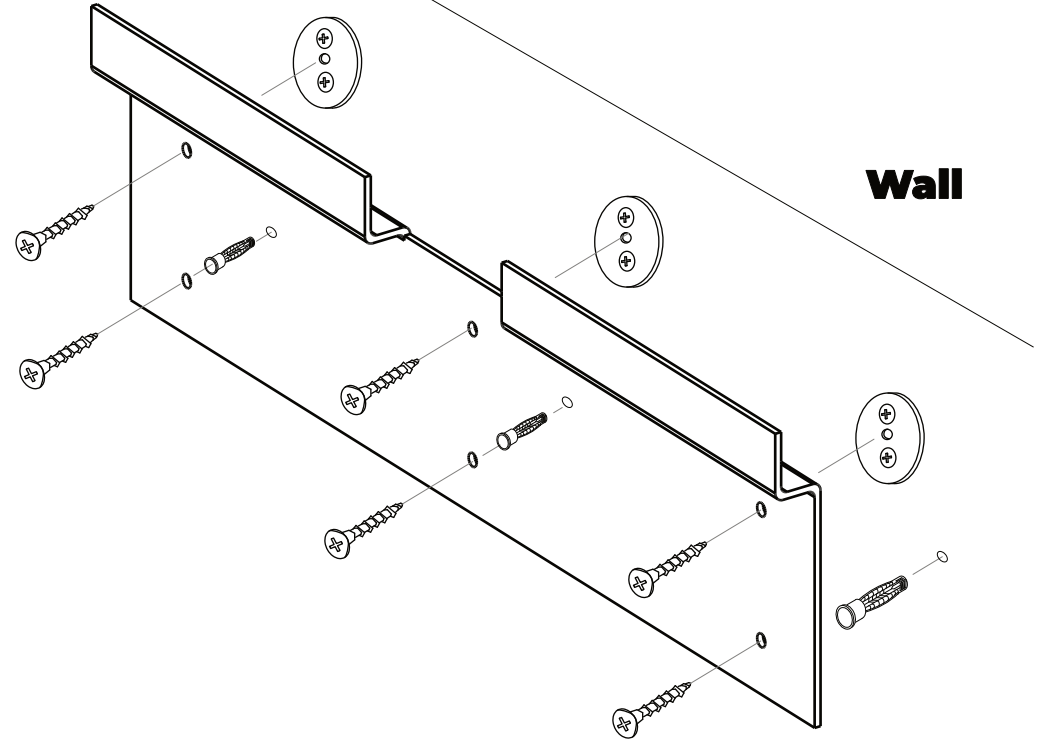


Fixings Pack #10




x6



x3




5

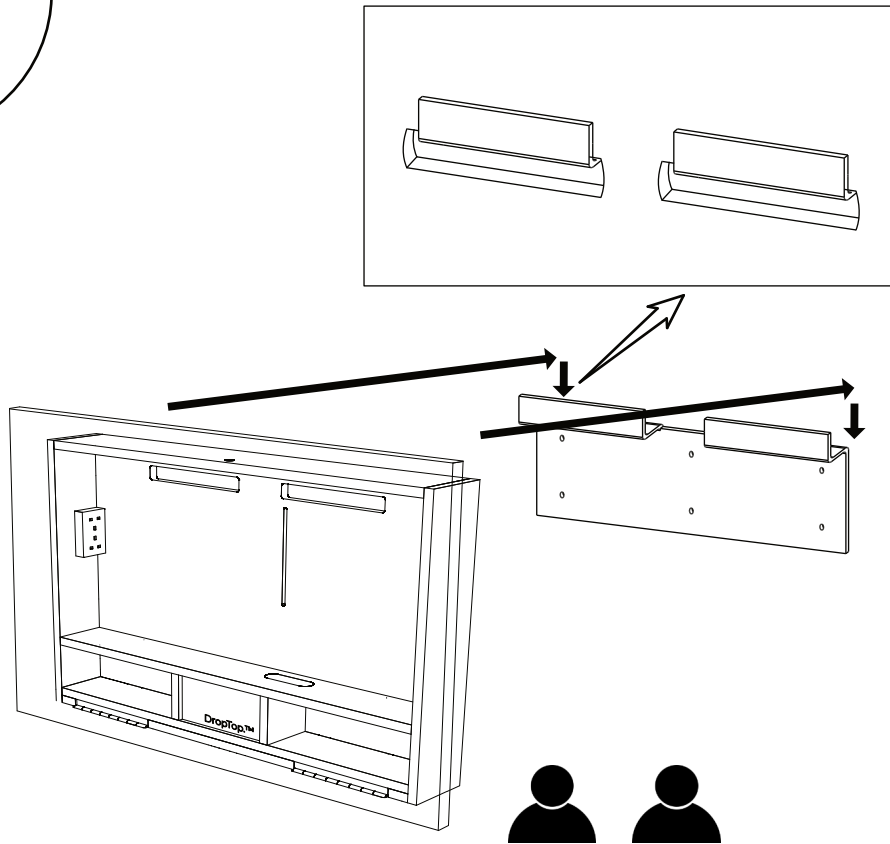


To safely mount the desk , make sure that the DropTop is **locked** before lifting it onto the wall plate.


6

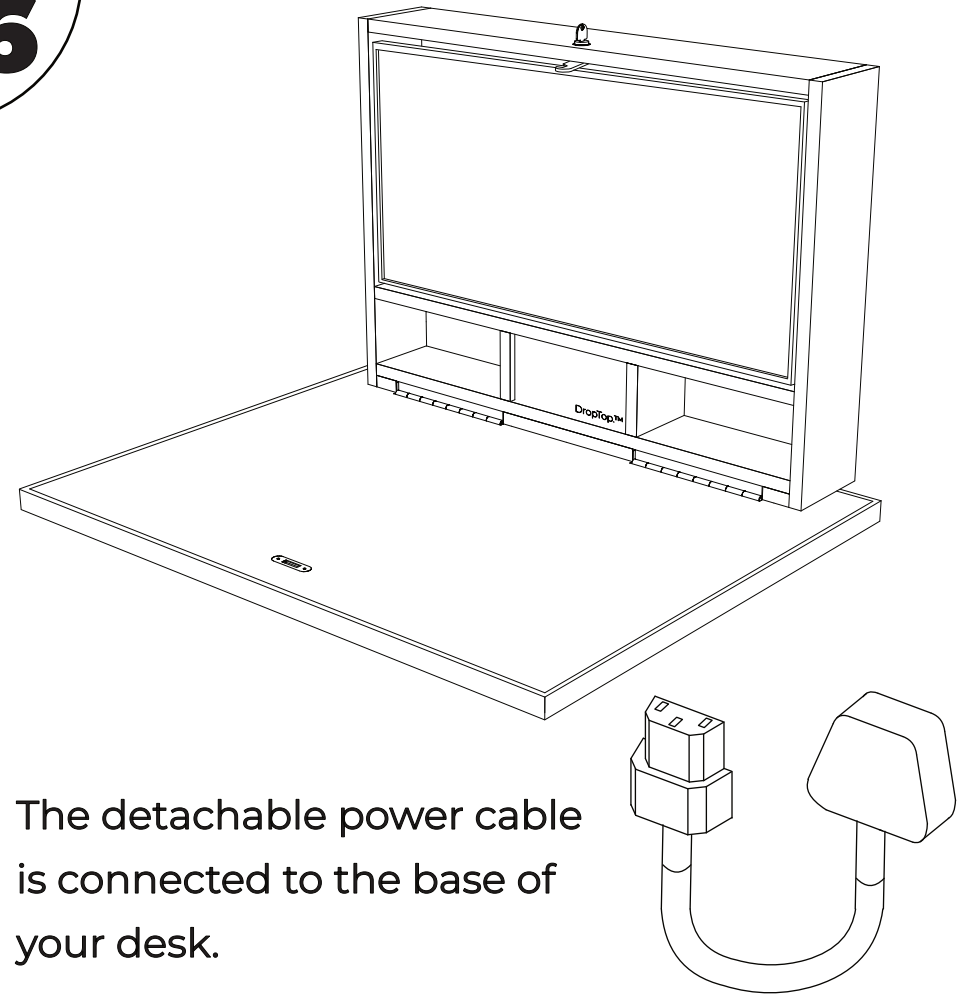


The detachable power cable is connected to the base of your desk.

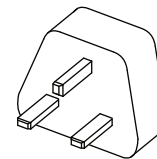


UK PLUG

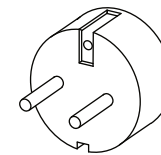

EU PLUG

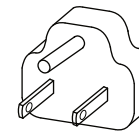


USA PLUG

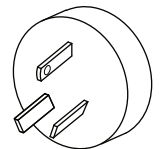


AU / NZ PLUG

DropTop Artwork


The Artwork is attached to the DropTop using green buttons that fit into the black oval securing clips embedded in the worktop.

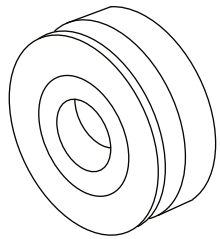

Green buttons are attached to the back of the artwork.

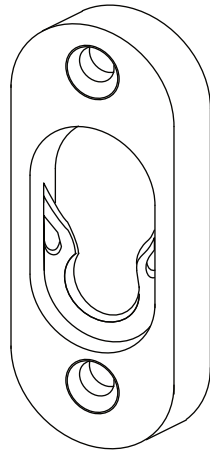



Black oval securing clips.

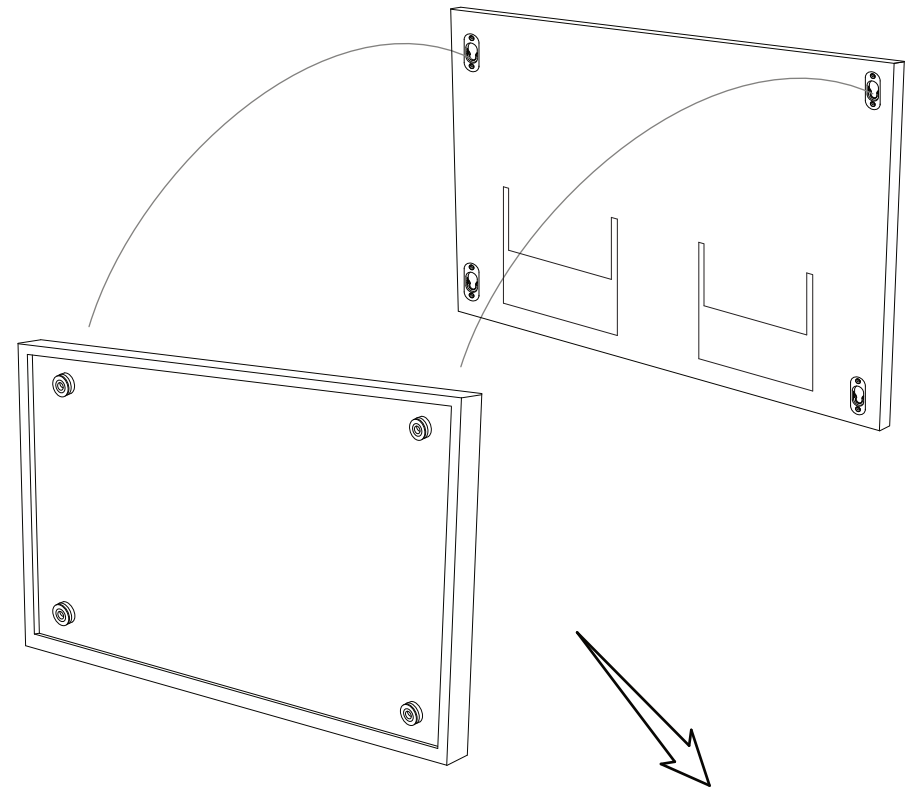

Lock your DropTop


To attach the artwork, make sure the green buttons are securely slotted into the black oval securing clips.

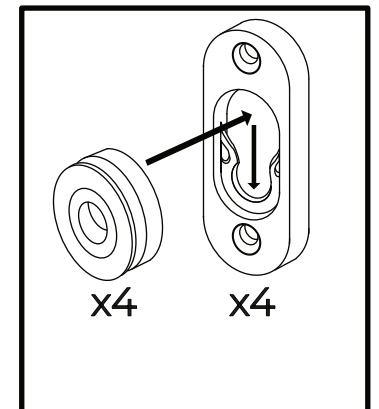

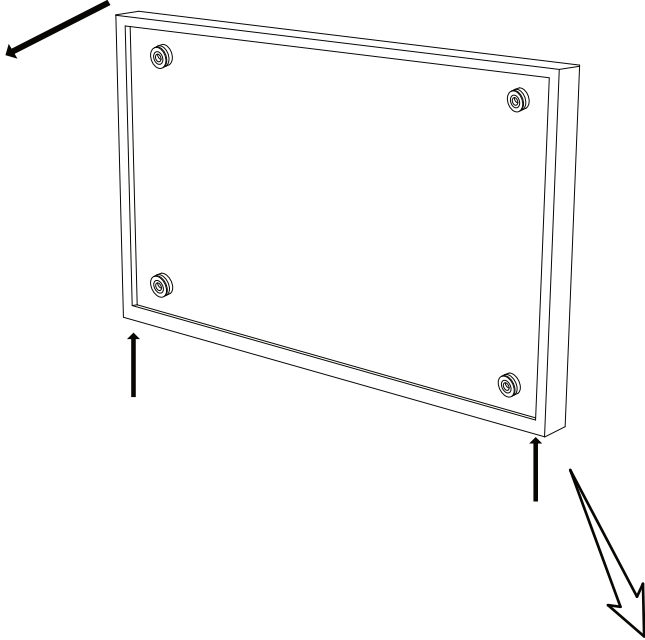

Lock your DropTop


To remove the artwork, gently push up from the base of the frame to dislodge the green buttons.

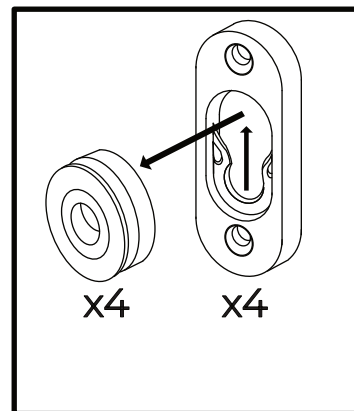

DropTop™ Single 32 Classic

Thank you for choosing to purchase your DropTop™ wall-mounted desk. We are delighted to have you as part of our community. You're taking a wonderful step towards improving your workspace and achieving a better work-life balance. We couldn't be more thrilled to support you in this journey.

Our team has put immense effort into designing and crafting the DropTop™ desk range to ensure it meets the highest standards of quality and functionality. We sincerely hope it transforms your workspace into a more productive and enjoyable environment.

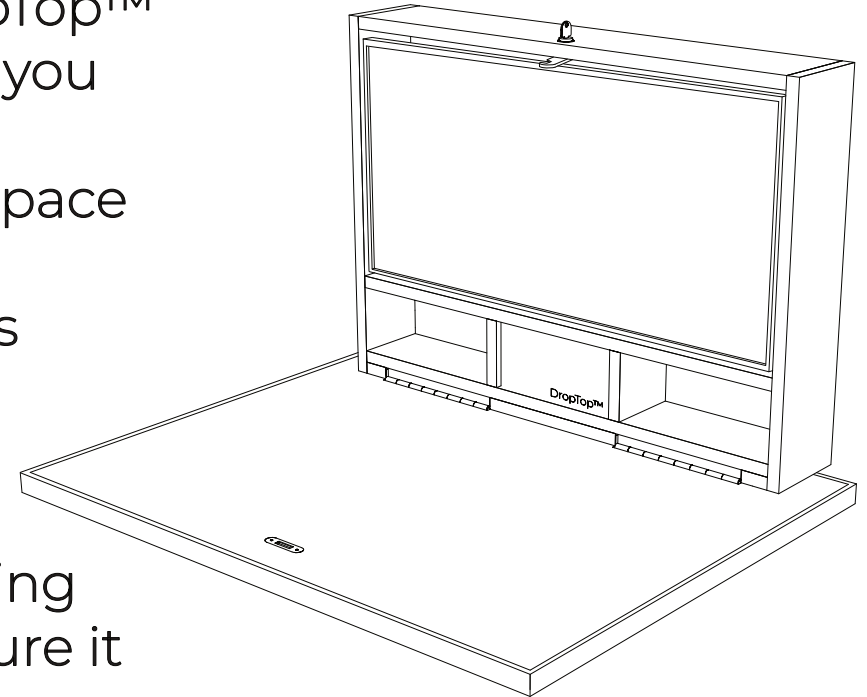

www.pithandstem.com